


hp LaserJet 3380
all-in-one



i n v e n t

service

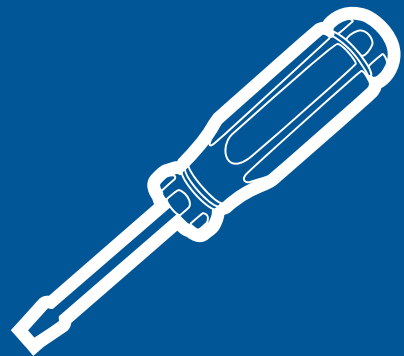

hp LaserJet 3380 all-in-one

Service Manual _____

Copyright Information

© 2004 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited except as allowed under copyright laws.

The information contained in this document is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number: Q2660-90901

Edition 1, 1/2004

Trademark Credits

Microsoft, Windows, and MS-DOS are U.S. registered trademarks of Microsoft Corporation.

PostScript® is a trademark of Adobe Systems Incorporated.

All other products mentioned herein may be trademarks of their respective companies.

Safety Information

WARNING!

Potential Shock Hazard

Always follow basic safety precautions when using this product to reduce risk of injury from fire or electric shock.

Read and understand all instructions in the user guide.

Observe all warnings and instructions marked on the product.

Use only a grounded electrical outlet when connecting the HP LaserJet 3380 all-in-one product to a power source. If you don't know whether the outlet is grounded, check with a qualified electrician.

Do not touch the contacts on the end of any of the sockets on the HP LaserJet 3380 all-in-one. Replace damaged cords immediately.

Unplug this product from wall outlets before cleaning.

Do not install or use this product near water or when you are wet.

Install the product securely on a stable surface.

Install the product in a protected location where no one can step on or trip over the power cord, and the power cord will not be damaged.

If the product does not operate normally, see the online user guide.

Refer all servicing questions to qualified personnel.

Table of contents

1 Product information

Product configuration	2
Hardware description	2
Firmware description	2
Software and supported operating systems.....	2
Product features	4
Overview of product	5
Hardware components	5
Product identification.....	6
Model and serial numbers	6
Product specifications	7
Physical specifications.....	7
Environmental specifications.....	7
Performance.....	7
Electrical specifications.....	8
Acoustic emissions.....	9
Skew specifications.....	9
Fax specifications.....	10
Printable area (margins).....	10
Battery specifications.....	10
Warranty statement	12
HP's Premium Protection print-cartridge warranty.....	13
Extended warranty.....	14
Print-cartridge information	15
Refilled print cartridges	15
HP LaserJet printing supplies	15
HP Printing Supplies Returns and Recycling Program information.....	15
FCC regulations.....	17
Telephone Consumer Protection Act (United States).....	19
IC CS-03 requirements.....	20
Declaration of Conformity	21
Safety statements.....	22
Laser safety statement.....	22
Canada DOC regulations.....	22
Laser statement for Finland.....	23
Korean EMI statement.....	23
Australia.....	23
Regulatory information for the European Union countries/regions.....	24

2 Operation

Operating environment	26
Identifying the control-panel components	27
Fax controls	27
Alphanumeric buttons	28
Menu and cancel controls	28

Copy, scan, and start controls	29
Control-panel menu structure	30
To use the control-panel buttons.....	30
To print the control-panel menu structure.....	30
Product media specifications	34
Supported media sizes and types	34
Guidelines for using media	36
Paper and transparencies	36
Common media problems	36
Labels	37
Envelopes	37
Card stock and heavy media	38
Loading media	40
Media input tray	40
Priority input tray	40
Specific types of media	40
Selecting originals for the automatic document feeder (ADF)	41
Specifications for ADF originals	41
Media information for the flatbed	42
Loading originals to copy or scan	43
To load originals onto the flatbed scanner	43
To load originals into the ADF input tray	43
Printer output paths	45
Output bin and straight-through output path	45

3 Maintenance

Life expectancies of parts that wear	48
Scanner calibration	49
Cleaning the product	50
Cleaning the glass.....	50
Cleaning the lid backing.....	51
Cleaning the paper path.....	51
Cleaning the print-cartridge area.....	52
Cleaning the pickup roller.....	54
Cleaning the printer separation pad	55
User-replaceable parts	56
Replacing the pickup roller.....	56
Replacing the printer separation pad.....	58
Replacing an ADF.....	61
Replacing an ADF pickup-roller assembly.....	62
Removing and replacing the product control-panel bezel.....	65

4 Operational overview

Basic functions	68
Basic sequence of operation (formatter-to-printer)	69
Basic sequence of operation (scanner).....	71
Formatter system	73
Central processing unit	73
Line interface unit (LIU)	73
Motor controller PCA	73
Flash memory	73
Standard boot process	73
RAM	74
Parallel interface or universal serial bus (USB) interface	74
Control panel	74

EconoMode (Draft mode)	74
MEt	75
Enhanced I/O	75
PJL overview	75
Scanner and ADF functions and operation	76
Scanner functions	76
Scanner operation	77
ADF operation	77
ADF paper path and ADF sensors	78
ADF jam detection	78
Printer functions and operation	79
Engine control unit (power system)	79
Image-formation system	85
Printer paper-feed system	86
Jam detection	87
Fax functions and operation	89
PSTN operation	89
The fax subsystem	89
Formatter in the fax subsystem	89
LIU in the fax subsystem	89
Fax page storage in flash memory	92

5 Removal and replacement

Removal and replacement strategy	97
Required tools	97
Before performing service.....	97
After performing service.....	98
Print cartridge	98
Parts removal order	98
Scanner assemblies	101
Printer right-side cover	101
Scanner side covers	102
Automatic document feeder (ADF) assembly	104
ADF pickup-roller assembly	105
ADF document-feed guide/cleanout comb	107
ADF input-tray flag.....	108
ADF separation pad	109
Control-panel bezel	110
To reinstall the control-panel bezel	111
Control panel	112
Control-panel chassis	113
Speaker.....	114
Scanner PCA	115
ADF scanner glass	118
Separation of the scanner from the printer	119
Separate the scanner from the printer.....	119
External components	122
Height guides.....	122
Left-side door	122
Back cover	123
Printer top cover	125
Front-cover assembly	125
Printer assemblies	130
Laser/scanner assembly.....	130
Height flapper.....	130

Left and right support covers (front corner brackets)	131
Transfer upper guide assembly.....	132
Transfer roller	132
Line interface unit (LIU)	133
Formatter	134
Left bottom frame support	135
Fuser assembly	136
Output rollers	139
Stepping motor	141
Solenoid	141
Fan assembly	142
Pickup assembly	144
Paper lift-plate assembly and pickup roller shaft	145
To reinstall the paper lift-plate assembly.....	148
Right plate assembly	149
Left plate assembly	150
Bottom assemblies	152
ECU fuses and ECU pan	152
Paper-feed assembly	155

6 Troubleshooting

Basic troubleshooting	161
Control-panel messages	166
Alert and warning messages	166
Critical error messages	174
Event-log codes.....	177
Solving image-quality problems	179
Checking the print cartridge	179
Solving print image-quality problems	179
Solving scanning (copying) image-quality problems	188
Repetitive image-defect ruler	194
Solving paper-feed problems	195
Jams occur in the printer.....	195
Solving print paper-feed problems	197
Jams occur in the automatic document feeder (ADF).....	199
Solving scanner (copier) paper-feed problems	202
Solving problems with digital subscriber line (DSL) connections.....	204
Connecting additional devices.....	205
Dedicated fax line.....	205
Shared phone line.....	205
To connect additional devices.....	205
Functional checks	208
Engine test	208
Control-panel check.....	208
Half self-test functional check	209
Drum-rotation functional check	210
Heating-element check	210
High-voltage power-supply check	211
Paper-path check	213
Updating or recovering the firmware code	215
Firmware update by using flash executable	215
Firmware-recovery DIMM	215
Troubleshooting tools	217
Printing a configuration report, demonstration page, or menu structure	217
Printing all fax reports at once	217

T.30 protocol trace	217
Service-mode functions	238
Secondary service menu	238
Developer's menu	239
Adjusting the country/region code parameters.....	240
Soft reset.....	241
NVRAM init	241
Printer job language (PJL) software commands	242
System settings for localized products.....	243
Main wiring	245
Locations of connectors	247
Locations of connectors and switches	248

7 Parts and diagrams

Ordering parts and supplies.....	250
Parts.....	250
Related documentation and software.....	250
Parts that wear	250
Accessories.....	251
Memory.....	251
Print cartridges and toner supplies.....	251
Cables.....	251
Common hardware	252
Parts kits.....	253
How to use the parts lists and diagrams.....	253
Scanner assemblies.....	254
External assemblies.....	262
Internal assemblies.....	268
Alphabetical parts list.....	286
Numerical parts list.....	295

Index