



# HP LaserJet 4000 and 4050 Series Printers Service Manual

---

HP LaserJet 4000 and 4050  
Series Printers

**Service Manual** \_\_\_\_\_

**© Copyright Hewlett-Packard  
Company 1999**

All Rights Reserved.  
Reproduction, adaptation, or  
translation without prior written  
permission is prohibited, except  
as allowed under the copyright  
laws.

Publication number  
C4251-91003

First edition, April 1999

**Warranty**

The information contained in  
this document is subject to  
change without notice.

Hewlett-Packard makes no  
warranty of any kind with  
respect to this information.  
HEWLETT-PACKARD  
SPECIFICALLY DISCLAIMS  
THE IMPLIED WARRANTY OF  
MERCHANTABILITY AND  
FITNESS FOR A PARTICULAR  
PURPOSE.

Hewlett-Packard shall not be  
liable for any direct, indirect,  
incidental, consequential, or  
other damage alleged in  
connection with the furnishing or  
use of this information.

**Trademark Credits**

PostScript™ is a trademark of  
Adobe Systems Incorporated  
which may be registered in  
certain jurisdictions.

CompuServe™ is a U.S.  
trademark of CompuServe, Inc.

Windows® is a U.S. registered  
trademarks of Microsoft  
Corporation.

TrueType™ is a U.S. trademark  
of Apple Computer, Inc.

ENERGY STAR® is a U.S.  
registered service mark of the  
U.S. EPA.

# Contents

## 1 Printer Description

|   |      |
|---|------|
| Overview . . . . .                          | 1-1  |
| Printer Features . . . . .                  | 1-2  |
| Identification . . . . .                    | 1-8  |
| Model and Serial Numbers . . . . .          | 1-8  |
| Site Requirements . . . . .                 | 1-9  |
| Space Requirements . . . . .                | 1-10 |
| Environmental Requirements . . . . .        | 1-11 |
| Paper Specifications. . . . .               | 1-12 |
| Supported Types of Paper . . . . .          | 1-15 |
| Guidelines for Using Paper . . . . .        | 1-16 |
| Labels . . . . .                            | 1-19 |
| Transparencies . . . . .                    | 1-19 |
| Envelopes . . . . .                         | 1-20 |
| Card Stock and Heavy Paper . . . . .        | 1-23 |
| Safety Information . . . . .                | 1-24 |
| Laser Safety Statement . . . . .            | 1-24 |
| Canadian DOC Regulations . . . . .          | 1-24 |
| FCC Regulations . . . . .                   | 1-25 |
| Laser Statement for Finland . . . . .       | 1-26 |
| Toner Safety . . . . .                      | 1-27 |
| Environmental Product Stewardship . . . . . | 1-28 |

## 2 Service Approach

|   |      |
|---|------|
| Overview . . . . .                                  | 2-1  |
| Service Approach . . . . .                          | 2-2  |
| Parts and Supplies . . . . .                        | 2-3  |
| Ordering Information . . . . .                      | 2-3  |
| Helpful Documentation . . . . .                     | 2-4  |
| Phone Numbers for Ordering . . . . .                | 2-6  |
| Exchange Program . . . . .                          | 2-6  |
| Consumables . . . . .                               | 2-6  |
| World Wide Web . . . . .                            | 2-6  |
| HP Service Parts Information Compact Disc . . . . . | 2-6  |
| HP Support Assistant Compact Disc . . . . .         | 2-7  |
| HP FIRST . . . . .                                  | 2-7  |
| Toner Cartridge Information . . . . .               | 2-9  |
| Warranty Statement . . . . .                        | 2-10 |

### 3 Printer Operation

|  |      |
|--|------|
| Overview . . . . .   | 3-1  |
| Using the Control Panel . . . . .  | 3-2  |
| Control Panel Layout . . . . .   | 3-2  |
| Control Panel Lights. . . . .  | 3-2  |
| Control Panel Keys . . . . .   | 3-3  |
| Settings and Defaults. . . . .   | 3-4  |
| Control Panel Menus . . . . .  | 3-5  |
| Quick Copy Jobs Menu . . . . .   | 3-6  |
| Private/Stored Jobs Menu . . . . .                                       | 3-7  |
| Information Menu. . . . .  | 3-8  |
| Paper Handling Menu . . . . .  | 3-9  |
| Print Quality Menu . . . . .   | 3-12 |
| Printing Menu. . . . .   | 3-15 |
| Configuration Menu . . . . .   | 3-20 |
| I/O Menu . . . . .   | 3-26 |
| EIO Menu (Networked Printers). . . . .                                   | 3-29 |
| Resets Menu . . . . .  | 3-31 |
| Service Mode . . . . .   | 3-32 |
| Service Menu. . . . .  | 3-33 |
| Setting the Page Count, Maintenance Count, and<br>Serial Number. . . . . | 3-33 |
| Cold Reset Paper. . . . .  | 3-36 |
| Diagnostics . . . . .  | 3-36 |
| Clear Event Log. . . . .   | 3-36 |
| Testing the Printer . . . . .  | 3-37 |
| Resetting the Printer. . . . .   | 3-38 |
| System Configuration . . . . .   | 3-39 |
| MS-DOS System Configuration . . . . .                                    | 3-39 |
| Parallel DOS Commands. . . . .   | 3-39 |
| Serial MS-DOS Commands. . . . .  | 3-40 |
| Printer I/O Configuration. . . . .                                       | 3-41 |
| Parallel Menu. . . . .   | 3-41 |
| Serial Configuration . . . . .   | 3-41 |

### 4 Printer Maintenance

|  |     |
|--|-----|
| Overview . . . . .                             | 4-1 |
| Cleaning the Printer and Accessories . . . . . | 4-2 |
| Cleaning Spilled Toner. . . . .                | 4-4 |
| Preventative Maintenance . . . . .             | 4-5 |
| Reset Maintenance Count . . . . .              | 4-5 |
| Expected Life of Components . . . . .          | 4-6 |

## 5 Functional Information

|  |      |
|--|------|
| Overview . . . . .   | 5-1  |
| Power Supply System . . . . .                                    | 5-2  |
| AC/DC Power Distribution . . . . .                               | 5-2  |
| Overcurrent Overvoltage Protection . . . . .                     | 5-3  |
| High-voltage Power Distribution . . . . .                        | 5-4  |
| Toner Cartridge Detection . . . . .                              | 5-5  |
| Engine Controller System. . . . .                                | 5-6  |
| Engine Controller Board Inputs and Outputs . . . . .             | 5-8  |
| Laser and Scanner Drive . . . . .                                | 5-12 |
| Paper Motion Monitoring and Control . . . . .                    | 5-12 |
| Solenoids, Sensors, Clutches, and Switches . . . . .             | 5-12 |
| Engine Test Print . . . . .                                      | 5-12 |
| Motors . . . . .   | 5-13 |
| Formatter System . . . . .                                       | 5-15 |
| PowerSave . . . . .  | 5-15 |
| Resolution Enhancement technology (REt). . . . .                 | 5-16 |
| EconoMode . . . . .  | 5-16 |
| Input/Output . . . . .   | 5-17 |
| CPU . . . . .  | 5-18 |
| Printer Memory . . . . .   | 5-18 |
| Random Access Memory (RAM) . . . . .                             | 5-19 |
| DIMM Slots . . . . .   | 5-19 |
| Page Protect . . . . .   | 5-20 |
| PJM Overview. . . . .  | 5-20 |
| PML . . . . .  | 5-21 |
| Control Panel. . . . .   | 5-21 |
| Image Formation System . . . . .                                 | 5-22 |
| Toner Cartridge . . . . .  | 5-24 |
| Photosensitive Drum . . . . .                                    | 5-25 |
| Writing the Image. . . . .                                       | 5-28 |
| Developing the Image . . . . .                                   | 5-29 |
| Transferring the Image . . . . .                                 | 5-30 |
| Image Fusing/Variable Fusing Temperature . . . . .               | 5-31 |
| Paper Feed System . . . . .                                      | 5-33 |
| Clutches and Sensors . . . . .                                   | 5-35 |
| Printing from Tray 1 . . . . .                                   | 5-36 |
| Printing from Tray 2 . . . . .                                   | 5-38 |
| Printing from the Optional 500-sheet<br>Universal Tray . . . . . | 5-41 |
| Envelope Feeder . . . . .  | 5-44 |
| Duplexer . . . . .   | 5-46 |
| Paper Jam . . . . .  | 5-48 |
| Basic Sequence of Operation. . . . .                             | 5-49 |

## 6 Removing and Replacing Parts

|  |      |
|--|------|
| Overview   | 6-1  |
| Removal and Replacement Strategy   | 6-2  |
| Tools  | 6-3  |
| Removing Covers  | 6-6  |
| Rear Right Side Cover  | 6-6  |
| Top Cover  | 6-7  |
| Left Side Cover  | 6-12 |
| Front Right Side Cover   | 6-13 |
| Rear Cover/Rear Output Bin   | 6-14 |
| Tray 1   | 6-15 |
| Removing Assemblies  | 6-18 |
| Fuser  | 6-18 |
| Formatter Cage Assembly  | 6-20 |
| Output Assembly  | 6-21 |
| Laser Scanner  | 6-23 |
| Fan  | 6-24 |
| Main Motor   | 6-25 |
| Transfer Roller  | 6-26 |
| Tray 1 Pickup Roller   | 6-27 |
| Tray 1 Pickup Assembly   | 6-29 |
| Right Side Toner Cartridge Guide   | 6-33 |
| Registration Assembly  | 6-34 |
| Paper Feed Assembly  | 6-36 |
| Formatter Pan  | 6-39 |
| Gear Train   | 6-40 |
| Delivery Drive Assembly  | 6-41 |
| Separating the Engine Module from the Paper Feed Module                          | 6-42 |
| Engine Controller Board  | 6-44 |
| Paper Feed Rollers   | 6-48 |
| Separation Rollers   | 6-49 |
| Paper Feed Module Plate  | 6-50 |
| Paper Feed Module Gear Train Assembly  | 6-51 |
| Paper Feed Module Side Rails   | 6-52 |
| Lower Paper Feed Module Plate (HP LaserJet 4000 T/4000 TN<br>and 4050 T/4050 TN) | 6-53 |
| PCA Cover (HP LaserJet 4000 T/4000 TN and<br>4050 T/4050 TN)                     | 6-54 |
| PCA Cover (HP LaserJet 4000/4000 N and 4050/4050 N)                              | 6-55 |
| PCA Controller   | 6-56 |

## 7 Troubleshooting

|                                       |       |
|---------------------------------------|-------|
| Overview                              | 7-1   |
| Troubleshooting Process               | 7-2   |
| Troubleshooting Flowchart             | 7-4   |
| Troubleshooting Flowchart (Continued) | 7-5   |
| Troubleshooting the Printing System   | 7-6   |
| Preliminary Operating Checks          | 7-6   |
| Power On                              | 7-7   |
| Engine Test                           | 7-11  |
| Display                               | 7-12  |
| Event Log                             | 7-13  |
| Printer Messages                      | 7-17  |
| General Paper Path Troubleshooting    | 7-45  |
| Information Pages                     | 7-48  |
| Image Quality                         | 7-54  |
| Image System Troubleshooting          | 7-74  |
| Interface Troubleshooting             | 7-77  |
| AUTOEXEC.BAT Standard Configurations  | 7-81  |
| Reference Diagrams                    | 7-84  |
| Locations of Components               | 7-84  |
| Paper Path                            | 7-90  |
| Engine Controller Board               | 7-93  |
| Paper Size Detection Switches         | 7-94  |
| Motors                                | 7-96  |
| Connectors                            | 7-97  |
| PCAs                                  | 7-100 |
| Sensors and Thermistor                | 7-102 |
| Solenoids and Clutch                  | 7-105 |
| Switches                              | 7-108 |
| Timing                                | 7-110 |

## 8 Parts and Diagrams

|   |      |
|---|------|
| Overview                                | 8-1  |
| How To Use the Parts Lists and Diagrams | 8-2  |
| Accessories and Supplies                | 8-4  |
| Common Screws and Replacement Cables    | 8-6  |
| Illustrations and Parts Lists           | 8-8  |
| Alphabetical Parts List                 | 8-58 |
| Numerical Parts List                    | 8-67 |