


hp LaserJet 2200



i n v e n t

service

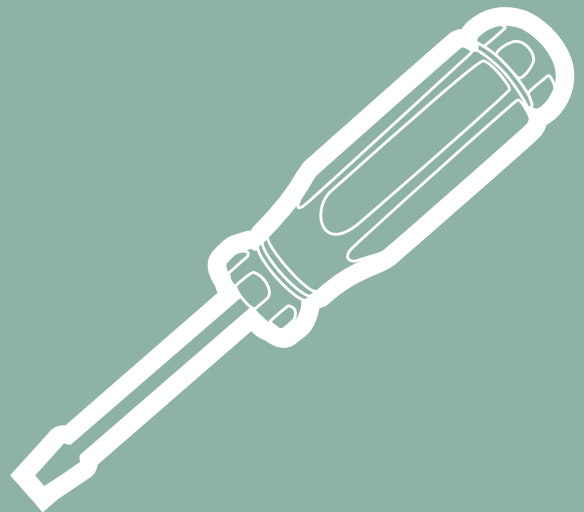



# HP LaserJet 2200 Series Printer

**Service Manual** \_\_\_\_\_

© Copyright Hewlett-Packard Company,  
1999, 2000

All Rights Reserved. Reproduction,  
adaptation, or translation without prior written  
permission is prohibited, except as allowed  
under the copyright laws.

Part number: C4084-91077

First Edition, October 1999

Second Edition, September 2000

## Warranty

The information contained in this document is  
subject to change without notice.

Hewlett-Packard makes no warranty of any  
kind with respect to this information.  
HEWLETT-PACKARD SPECIFICALLY  
DISCLAIMS THE IMPLIED WARRANTY OF  
MERCHANTABILITY AND FITNESS FOR A  
PARTICULAR PURPOSE.

Hewlett-Packard shall not be liable for any  
direct, indirect, incidental, consequential, or  
other damage alleged in connection with the  
furnishing or use of this information.

## Trademark Credits

Adobe® and PostScript® are trademarks of  
Adobe Systems Incorporated which may be  
registered in certain jurisdictions.

ENERGY STAR® is a U.S. registered service  
mark of the United States Environmental  
Protection Agency.



# Table of contents

## List of figures

## List of tables

## 1 Product information

Printer features . . . . .	2
Identification . . . . .	4
Specifications . . . . .	5
Product overview . . . . .	7
External assembly locations . . . . .	7
Internal assembly locations . . . . .	10
Safety information . . . . .	11
Toner safety . . . . .	11
Laser safety . . . . .	12
LED safety . . . . .	12
Regulatory information . . . . .	12
FCC regulations . . . . .	12
Declaration of conformity . . . . .	12
Environmental Product Stewardship Program . . . . .	13
Protecting the environment . . . . .	13
Service approach . . . . .	15
Bench repair warranty . . . . .	15
HP Express Exchange . . . . .	15
Ordering information . . . . .	15
Supplemental documentation . . . . .	16
HP Direct ordering for genuine HP parts . . . . .	16
Consumables . . . . .	17
World Wide Web . . . . .	17
HP service parts information compact disc . . . . .	17
HP support assistant compact disc . . . . .	17
Reseller sales and service support . . . . .	17
Technical assistance . . . . .	18
Worldwide sales and service offices . . . . .	18

## 2 Operating requirements

Site requirements . . . . .	26
Operating environment . . . . .	26
Printer space requirement . . . . .	27
Media specifications . . . . .	28
General media specifications . . . . .	28
Guidelines for selecting paper . . . . .	29
Media input options . . . . .	30
Tray 1 media sizes . . . . .	31
Tray 2 and tray 3 (250-sheet feeder) . . . . .	32
Tray 3 (500-sheet feeder) . . . . .	32
Envelope specifications . . . . .	33
Label specifications . . . . .	35
Transparency specifications . . . . .	36
Storing print media . . . . .	36
Shipping print media . . . . .	37
Paper fillers . . . . .	37
Testing media specifications . . . . .	37
Tools and suppliers . . . . .	41

## 3 Printer configuration

Using the control panel . . . . .	44
Control panel . . . . .	44
Control panel lights . . . . .	44
Job Cancel . . . . .	44
Go . . . . .	44
Printing a demo page . . . . .	45
Self test/configuration page . . . . .	47
Self test/configuration-page elements . . . . .	48
JetDirect configuration page . . . . .	49
JetDirect configuration-page elements . . . . .	50
Continuous self test . . . . .	50
Engine test . . . . .	51
Performing an engine test . . . . .	51
Service mode . . . . .	52
Entering service mode . . . . .	52
Entering escape characters . . . . .	52
Setting the page count . . . . .	53
Setting the cold reset default . . . . .	54
Resetting the printer . . . . .	55
Cold reset . . . . .	55
NVRAM initialization . . . . .	55
EIO card reset . . . . .	55
Network printing . . . . .	56
Installing an HP JetDirect EIO card . . . . .	56
IR printing . . . . .	58
Fast Infrared Receiver . . . . .	58
Using the FIR port . . . . .	58

## 4 Printer maintenance

Service check points . . . . .	60
Periodic inspection of parts . . . . .	60
Cleaning the printer and accessories . . . . .	61
General cleaning . . . . .	61
Internal cleaning . . . . .	62
Engine cleaning . . . . .	64
Toner cartridge information . . . . .	65
Storage . . . . .	65
Handling instructions . . . . .	65
Refilled toner cartridges . . . . .	66
Recycling toner cartridges . . . . .	66
Toner cartridge weights . . . . .	66
Toner cartridge life expectancy . . . . .	66
Saving toner with EconoMode . . . . .	66
Redistributing the toner . . . . .	67

## 5 Theory of operation

Basic operations . . . . .	70
Power-on sequence . . . . .	70
Basic print-period operating sequences . . . . .	71
Printer timing . . . . .	72
Printer functionality and operation . . . . .	73
Formatter system . . . . .	74
Formatter hardware . . . . .	75
Formatter subsystem . . . . .	75
Engine control system . . . . .	77
Engine control subsystems . . . . .	78
Image formation system . . . . .	80
Pickup/feed system . . . . .	86
Sheet feeder . . . . .	88
Media detection . . . . .	90
Media detection . . . . .	90
Media-size detection . . . . .	90
Jam detection . . . . .	91
Pickup sensors . . . . .	91
Delivery sensors . . . . .	91
Reversing sensors . . . . .	92
Duplexer sensors . . . . .	92
Paper-feed sensor . . . . .	92

## 6 Removal and replacement

Removal and replacement strategies . . . . .	95
Required tools . . . . .	95
Toner cartridge removal and replacement . . . . .	96
Remove the toner cartridge . . . . .	96
Cover and tray removal and replacement . . . . .	97
Remove tray 3 . . . . .	97
Remove the cassette from tray 2 . . . . .	97
Remove I/O cover . . . . .	98
Remove EIO card . . . . .	98
Remove DIMM cover . . . . .	99
Remove rear cover . . . . .	100
Remove top cover . . . . .	102
Remove left cover . . . . .	105
Remove tray 1 . . . . .	106
Internal disassembly and assembly . . . . .	109

Remove transfer roller . . . . .	109
Remove DIMM . . . . .	111
Remove formatter PCB . . . . .	112
Remove EIO shield and guide . . . . .	113
Remove fuser assembly. . . . .	114
Remove fuser-film heater assembly. . . . .	117
Remove pressure roller . . . . .	119
Remove duplexer tray . . . . .	120
Remove duplexer media guide . . . . .	121
Remove power supply assembly . . . . .	122
Remove upper output delivery roller . . . . .	125
Disassemble the upper output delivery roller. . . . .	126
Remove lower output delivery rollers. . . . .	127
Remove laser/scanner assembly . . . . .	128
Remove transport belts and rollers . . . . .	130
Remove ribbon cable harness . . . . .	132
Remove duplexer reverse motor . . . . .	133
Remove printer drive assembly . . . . .	134
Remove engine controller assembly . . . . .	135
Remove main motor. . . . .	136
Remove motor plate. . . . .	137
Remove printer drive assembly gears . . . . .	139
Remove tray 1 pickup roller . . . . .	140
Remove tray 1 pickup roller assembly . . . . .	142
Remove tray 1 separation pad assembly. . . . .	145
Remove tray 1 paper-sensor lever. . . . .	146
Remove tray 1 solenoid . . . . .	148
Remove tray 2 pickup roller assembly . . . . .	149
Replace tray 2 pickup roller . . . . .	152
Remove tray 2 pickup roller and refeeder assembly . . . . .	153
Remove tray 2 solenoid . . . . .	156
Remove duplexer drive gears and solenoid. . . . .	157
Remove registration assembly. . . . .	158
Remove tray 3 assembly connector. . . . .	160
Remove cooling fan . . . . .	161
Remove toner-cartridge guide . . . . .	162
Remove dc bias voltage contacts (leaf springs). . . . .	164
Tray 3 disassembly and assembly . . . . .	166
Remove tray 3 (250-sheet feeder) cassette. . . . .	166
Remove tray 3 (250-sheet feeder) pickup roller. . . . .	167
Remove tray 3 (250-sheet feeder) feeder drive assembly. . . . .	168
Remove tray 3 (250 sheet-feeder) drive solenoid . . . . .	170
Remove tray 3 (500-sheet feeder) cassette. . . . .	171
Remove tray 3 (500-sheet feeder) pickup roller. . . . .	172
Remove tray 3 (500-sheet feeder) feeder drive assembly. . . . .	173
Remove tray 3 (500 sheet-feeder) drive solenoid . . . . .	175

## 7 Troubleshooting

Troubleshooting process . . . . .	178
Preliminary operating checks . . . . .	178
Basic fault isolation . . . . .	178
Troubleshooting process flow . . . . .	180
Power-on . . . . .	181
Troubleshooting with control-panel messages . . . . .	182
Control panel lights . . . . .	182
Control-panel light messages . . . . .	182
Media-handling problems . . . . .	192
Print test pages . . . . .	192

Engine test . . . . .	192
Self test/configuration page . . . . .	192
Jam troubleshooting . . . . .	193
Media problems . . . . .	197
Evaluate the test pages . . . . .	198
Status-log messages . . . . .	198
Verify installed options . . . . .	198
Image-formation troubleshooting . . . . .	199
Image defect tables . . . . .	201
Repetitive defect ruler . . . . .	207
Half self test functional check . . . . .	208
Drum-rotation functional check . . . . .	208
Media troubleshooting . . . . .	209
Determine the problem source: print media or printer . . . . .	209
Isolate a paper path . . . . .	209
Isolate a media brand . . . . .	210
Isolate a media type . . . . .	211
Evaluate media use practices . . . . .	215
Evaluate environmental conditions . . . . .	215
Communication troubleshooting . . . . .	217
Communications check . . . . .	217
Test message . . . . .	217
EIO troubleshooting . . . . .	217
JetDirect configuration-page elements . . . . .	219
JetDirect configuration . . . . .	219
Reference diagrams . . . . .	220

## 8 Parts and diagrams

Introduction . . . . .	228
Ordering parts . . . . .	228
Ordering consumables . . . . .	228
Consumables, accessories, and supplies . . . . .	229
Common fasteners and torque values . . . . .	230
Illustrations and parts lists . . . . .	231
External covers and panels . . . . .	231
Top cover assembly . . . . .	233
Internal components . . . . .	235
Power supply assembly . . . . .	245
Printer drive assembly . . . . .	247
Cassette pickup assembly . . . . .	249
Fusing assembly . . . . .	251
PCB assembly location . . . . .	253
250-sheet feeder external covers . . . . .	255
Tray 2 and 250-sheet feeder cassette . . . . .	257
250-sheet feeder internal components . . . . .	259
250-sheet feeder drive assembly . . . . .	261
250-sheet feeder PCB assembly location . . . . .	263
500-sheet feeder external covers . . . . .	265
500-sheet feeder cassette . . . . .	267
500-sheet feeder internal components . . . . .	269
500-sheet feeder drive assembly . . . . .	271
500-sheet feeder PCB assembly location . . . . .	273
Alphabetical parts list . . . . .	275
Numerical parts list . . . . .	284

## Index